

# MBQ-CAM-1 Auxiliary Camera


### How to allow the camera to be viewable without switch operation.

This would be for viewing the camera while driving with the use of the source input selection in your source unit's display menu. This would also allow the switch to function as a quick trigger of the camera.


**You will need:** Wire Cutters, Soldering Iron, Heat shrink (or electrical tape)

---


**Step 1.** Disconnect power from camera and locate the red wire labeled P3.

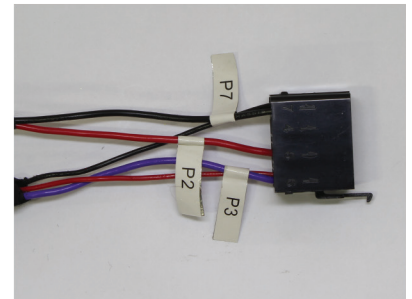


**Step 2.** Cut the red wire while leaving the purple wire connected to the switch.

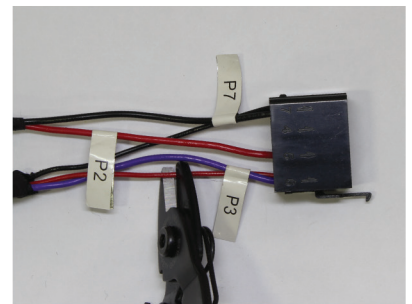


**Step 3.** After cutting the red wire on P3, strip back the plastic shielding on the red wire of P2.

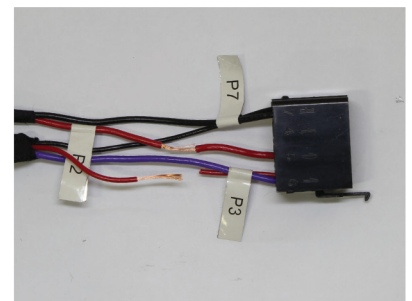


**Step 3.** After cutting the red wire on P3, strip back the plastic shielding on the red wire of P2.

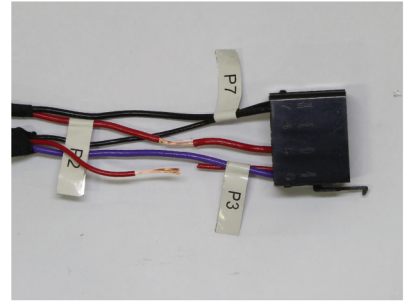

**Step 4.** Once shielding is removed, wrap the red wire from P3 around the exposed area of the red wire from P2.

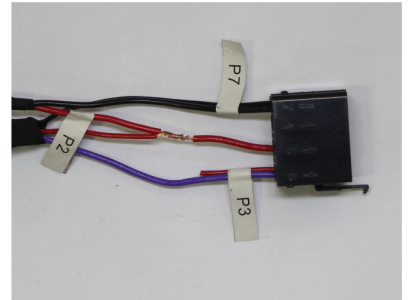

**Step 5.** Solder the wires together.

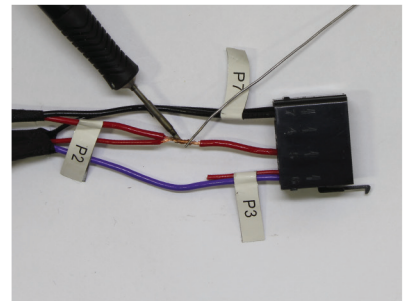

**Step 6.** Once the wires are soldered together, use heat shrink or electrical tape to insulate the wires.

